


DJM-250MK2

List of MIDI messages Version 1.00

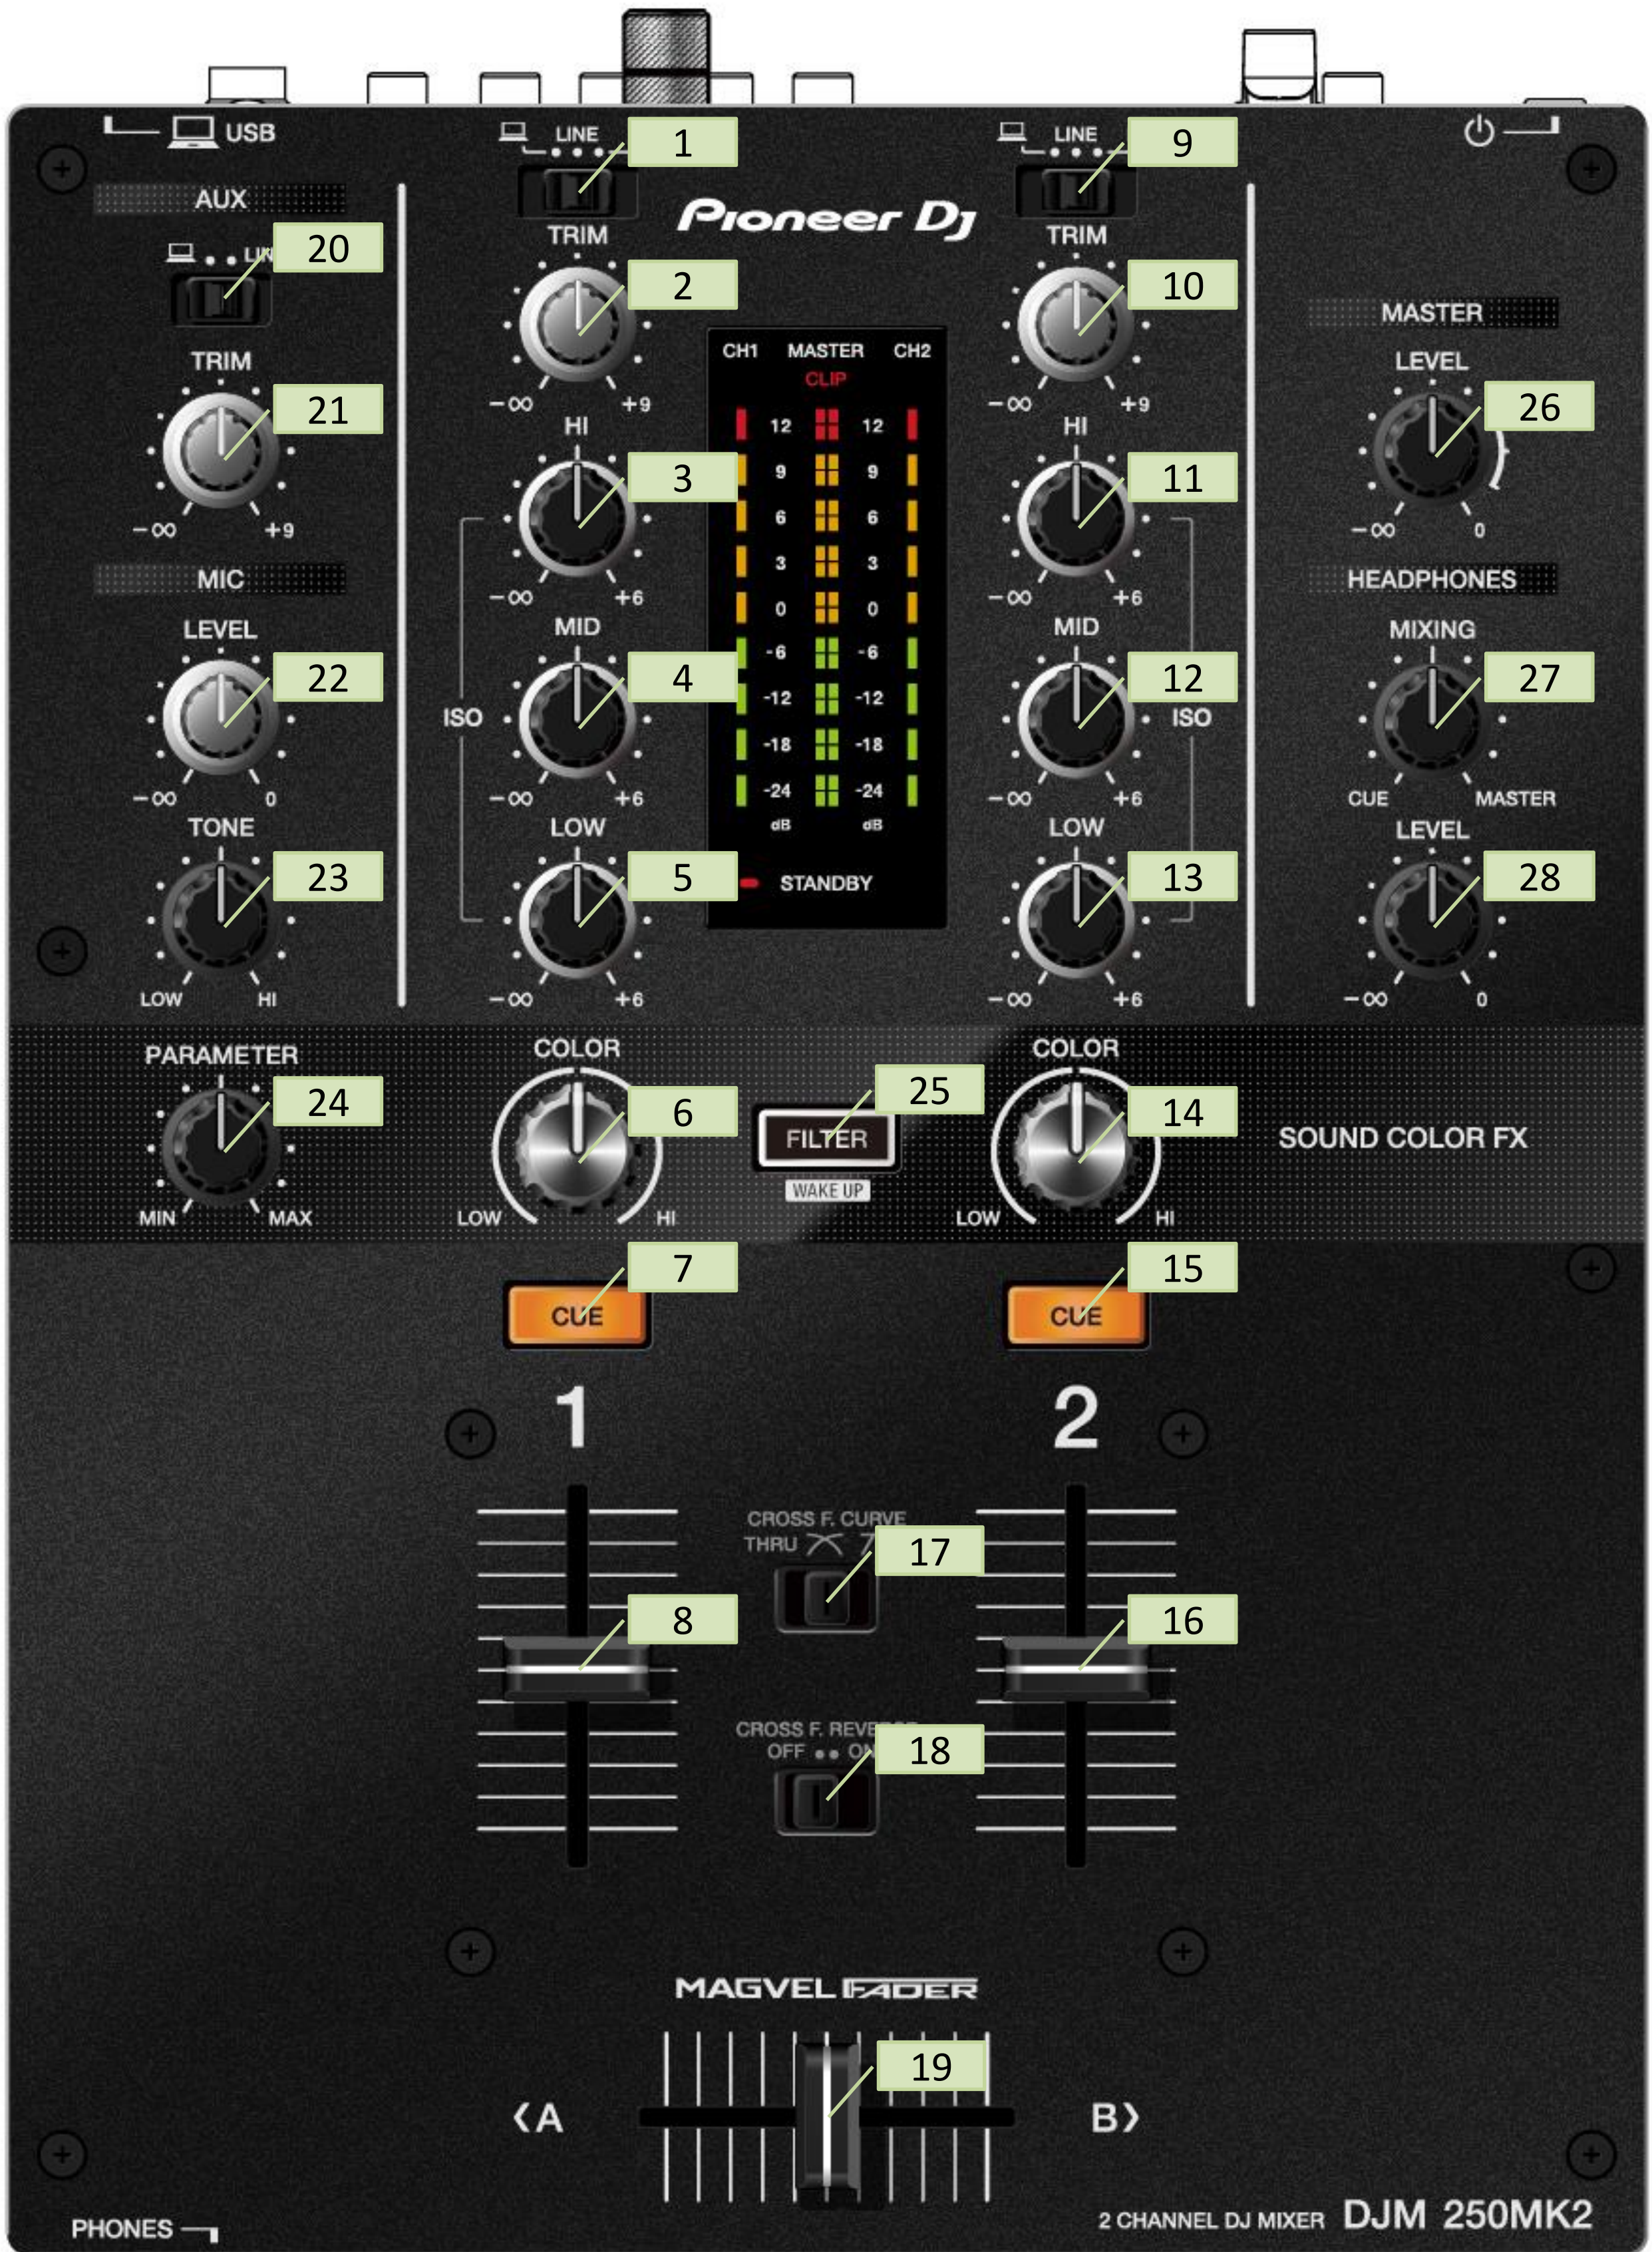

NOTE is a term used for MIDI to express that a key of a keyboard or a piano is pressed or your finger is released from it.

CC is an abbreviation of "Control Change".

Control Change is a kind of MIDI message used to communicate many kinds of control information such as sound quality and volume level.

Group	Part No.	User Interface			MIDI-IN (to computer)			Details(Data2)	MIDI Type
		UI name	Trigger	Condition (mode)	Status *1 (Hex)	Data 1 (Hex)	Data 2 (Hex)		
CH1	1	INPUT SELECTOR *2	slide	Computer	9n	35	00:OFF 7F:ON		-
				LINE		33	00:OFF 7F:ON		-
				PHONO		34	00:OFF 7F:ON		-
	2	TRIM	rotate		Bn	1	00(Min) - 7F(Max)		-
	3	HI	rotate		Bn	2	00(Min) - 7F(Max)		-
	4	MID	rotate		Bn	3	00(Min) - 7F(Max)		-
	5	LOW	rotate		Bn	4	00(Min) - 7F(Max)		-
	6	COLOR	rotate		Bn	5	00(Min) - 7F(Max)		-
7	CUE	press		Bn	46	00:OFF 7F:ON		Trigger/Toggle	
8	CH FADER	slide		Bn	11	00(Min) - 7F(Max)		-	
CH2	9	INPUT SELECTOR *2	slide	Computer	9n	39	00:OFF 7F:ON		-
				LINE		37	00:OFF 7F:ON		-
				PHONO		38	00:OFF 7F:ON		-
	10	TRIM	rotate		Bn	6	00(Min) - 7F(Max)		-
	11	HI	rotate		Bn	7	00(Min) - 7F(Max)		-
	12	MID	rotate		Bn	8	00(Min) - 7F(Max)		-
	13	LOW	rotate		Bn	9	00(Min) - 7F(Max)		-
	14	COLOR	rotate		Bn	A	00(Min) - 7F(Max)		-
15	CUE	press		Bn	47	00:OFF 7F:ON		Trigger/Toggle	
16	CH FADER	slide		Bn	12	00(Min) - 7F(Max)		-	
CROSS FADER	17	CROSS FADER CURVE	slide	LEFT 	Bn	5F	0		-
				CENTER 			40		-
				RIGHT 			7F		-
	18	CROSS FADER REVERSE	slide	OFF	Bn	60	0		-
				ON			7F		-
19	CROSS FADER	slide		Bn	B	00(Min) - 7F(Max)		-	
AUX	20	INPUT SELECTOR *2	slide	Computer	9n	4A	00:OFF 7F:ON		-
				LINE	9n	4B	00:OFF 7F:ON		-
21	TRIM	rotate		Bn	1C	00(Min) - 7F(Max)		-	
MIC	22	LEVEL	rotate		Bn	1E	00(Min) - 7F(Max)		-
	23	TONE	rotate		Bn	1F	00(Min) - 7F(Max)		-
SOUND COLOR FX	24	PARAMETER	rotate		Bn	6C	00(Min) - 7F(Max)		-
	25	FILTER	press		Bn	57	00:OFF 7F:ON		Trigger/Toggle
MASTER	26	MASTER LEVEL	rotate		Bn	18	00(Min) - 7F(Max)		-
HEADPHONES	27	MIXING	rotate		Bn	1B	00(Min) - 7F(Max)		-
	28	LEVEL	rotate		Bn	1A	00(Min) - 7F(Max)		-

*1 n : value of channel No.

9n : Note

Bn : Control Change (CC)

*2 For alternate selection of the user interface (UI) control, the MIDI message will be sent as follows.

Previously selected: OFF

Newly selected: ON